

Amico 400 - Mixer

AMICO

400

- | | | | |
|-----------|-------------------|-----------|------------|
| 1. Chorus | 5. Chorus/Room1 | 9. Hall1 | 13. Room3 |
| 2. Flange | 6. Chorus/Room2 | 10. Hall2 | 14. Plate1 |
| 3. Delay1 | 7. Vocal Cancel | 11. Room1 | 15. Plate2 |
| 4. Delay2 | 8. Rotary Speaker | 12. Room2 | 16. Plate3 |

Four stereo channel strips, each with the following controls:

- Eff: -15 to 0
- High: -15 to 0 to +15
- Pan: L to R
- Mid: -12 to 0 to +12
- Gain: 30 to -15 to 55 mic line
- Low: -15 to 0 to +15
- Vol: -40 to 0 to +15

Master section controls:

- Effect Select: 0 to 16
- Eff to Main: 0 to 15
- CD / Tape to Main: PWR
- PH: PWR
- Phones: 0 to 15
- Rmp Vol: -15 to 0 to +15 (Left, Peak, Right)
- Master: -40 to 0 to +15

1

2 STEREO 3

4

5 STEREO 6

MASTER

FBT